


FS-03 specifications

ISO 9001 ISO 14001


ĴÅ DNV

Document No FSH-O-051-01 Page 1/1


D-03 Silicone RTV Foam Repair Kit

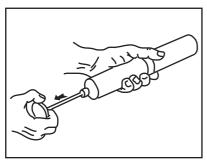


1 Pull back dasher rod

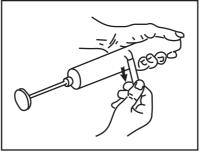


2 Remove clinch band (tape)

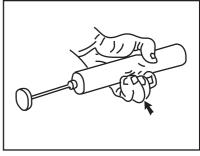


3 Squeeze middle of cartridge to deform barrier

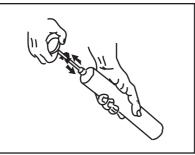


4 Push dasher rod down to plunger and mix by pulling/ pushing the rod 30 - 40 strokes. Turn the rod 90° clockwise between each stroke

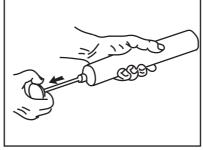


After completion of mixing, pull dasher rod back

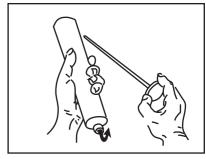

6 Remove the dasher rod

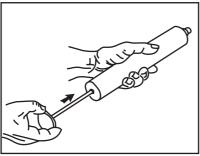

7 Insert the dasher rod through opening in red cap

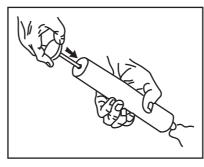

8 Press dasher rod forcing material from cartridge Type: D-03 Silicone RTV Foam
Colour: Grey/Black
Cure Time: 2 - 3 minutes
Density: 300 - 400 kg/m³ cured foam
Content: 196 gr or approx. 0.6 I cured foam

Article No: 100784